



REAR BEARING
(4)

CAR BODY

TRANS. MOUNTING EARS



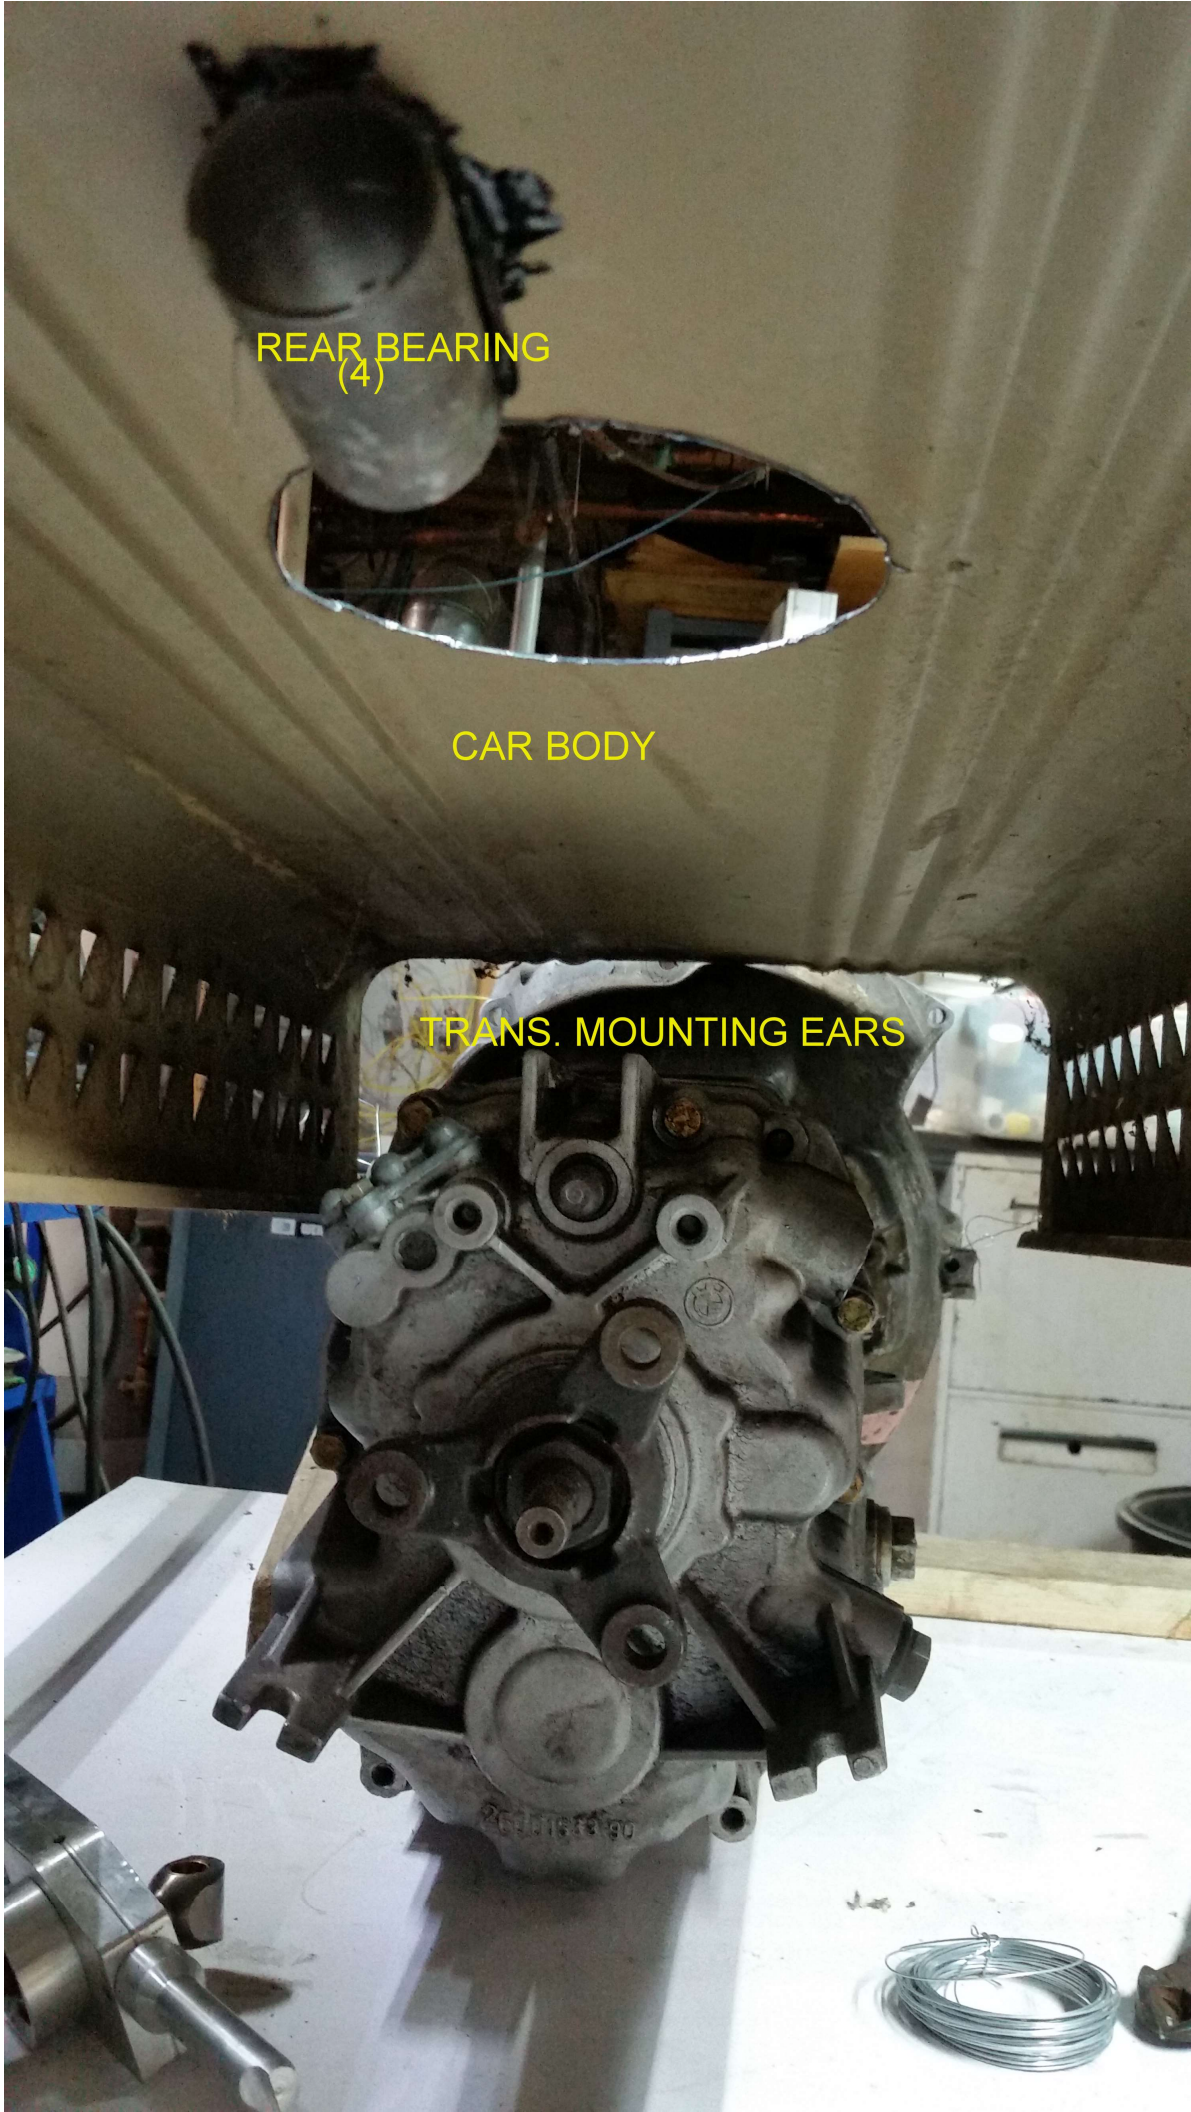

Rotate the lever 180 degrees and insert the lever in the hole of the body. Guide the front of the bracket to the left of the transmission and move the bracket forward over the transmission mounting ears.